

Designed by Jacques Adnet

### PRODUCT



Item no.: 61070-XX  
+ style code

### COLOURS



### DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

### VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass

### MIRROR VERSION

Series contains the following:

**Ø45, Ø58, Ø70**



### ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

### FACTS

#### MEASUREMENT

H:140 X Ø70 cm  
Depth of mirror frame: 7 cm  
Strap width: 2.3 cm  
Leather thickness frame 4,5 X two layers: 9 mm  
Leather thickness strap: 4,5 mm

#### WEIGHT ITEM

7,7 kg

#### PACKAGING TYPE

Cardboard box

#### PACKAGING MEASUREMENT - L X W X H CM

L:84 W:84 H:13,5 CM

#### WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
  - Bracket: Burnished brass
  - Drywall plug Driva TP12
  - Hanger bolt
  - Hexalobular socket key
  - Tack-It removable adhesive
  - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1544 g
- Cardboard box inner packaging quality ---: 1050 g
- Polystyrene EPS foam: 840 g

#### WEIGHT PACKAGING - TOTAL

11,5 kg

#### NUMBER OF PARCELS

1 pcs.

## ADNET CIRCULAIRE LARGE // GLASS MIRROR

ADNET COLLECTION

Designed by Jacques Adnet

### CLEANING AND MAINTENANCE

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

### ENVIRONMENT

Parts can be separated and sorted for recycling.

### INSTALLATION INSTRUCTIONS

56-15-300-02 Mounting instr. Adnet Circular Mirror.


**DK**

**RENSERING**  
 Almindelig rengøring: støvsug eller støv af med et rent, tør klud. Hvis læderet er soiled, kan det tørres af med en blødt, fugtig klud og en lille smule mildt sæbe og lukevarmt vand. Gør ikke store pletter. Efter rengøring skal læderet tørres grundigt og lufttørres. Brug aldrig hårtørrer eller anden varmefønde til at tørre læderet.

For pletter og søg, fjern overskydende væske med det samme, med en ren blød eller svamp, lad læderet lufttørre. Hvis yderligere rengøring er nødvendig, brug de nævnte mildt sæbe og lukevarmt vand. Brug aldrig hårtørrer eller andre varmefønde til at tørre læderet.

For svære pletter, sørg for at læderet er rent og fugtigt. Brug en blød, fugtig klud og en lille smule mildt sæbe og lukevarmt vand. Gør ikke store pletter. Efter rengøring skal læderet tørres grundigt og lufttørres. Brug aldrig hårtørrer eller anden varmefønde til at tørre læderet.


**TEKNISK INFORMATION**  
 Spejlet er monteret på en metal skive med en diameter på 700 mm og en tykkelse på 4 mm. Spejlet er monteret på en metal skive med en diameter på 700 mm og en tykkelse på 4 mm. Spejlet er monteret på en metal skive med en diameter på 700 mm og en tykkelse på 4 mm.



MONTAGEVEJLEDNING/ASSEMBLY INSTRUCTIONS/MONTAGEANLEITUNG

for

### ADNET CIRCULAIRE MIRROR



**EN**

**CLEANING**  
 For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

**TECHNICAL INFORMATION**  
 The mirror is available in either black or silver. The mirror is available in either black or silver. The mirror is available in either black or silver.

**DE**

**REINIGUNG**  
 Für eine normale Reinigung oder um Staub zu entfernen benutzen Sie ein Staubsauger. Reinigen Sie das Leder mit einem feuchten, sauberen Tuch. Wenn es verschmutzt ist, wischen Sie es mit einem feuchten, sauberen Tuch ab. Verwenden Sie kein hartes Wasser. Wischen Sie es anschließend mit einem sauberen Tuch ab.

Bei Flecken oder Flüssigkeitsverschüttungen wischen Sie den überschüssigen Rest mit einem sauberen Tuch oder Schwamm ab. Lassen Sie das Leder lufttrocknen.

Wenn eine intensive Reinigung notwendig ist, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit lauwarmem Wasser. Spülen Sie die Oberfläche gut ab und lassen Sie sie anschließend vollständig lufttrocknen. Verwenden Sie keine Haartrockner oder andere Heizquellen um das Leder zu trocknen.

Um hartnäckige Flecken zu entfernen, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit lauwarmem Wasser. Spülen Sie die Oberfläche gut ab und lassen Sie sie anschließend vollständig lufttrocknen. Verwenden Sie keine Haartrockner oder andere Heizquellen um das Leder zu trocknen.


Ein hartnäckiger Fleck kann auch mit einem sauberen, feuchten Tuch abgewischt werden. Verwenden Sie kein hartes Wasser. Wischen Sie es anschließend mit einem sauberen Tuch ab.

Die Spiegelgröße ist abhängig von der Wandhöhe. Die Spiegelgröße ist abhängig von der Wandhöhe. Die Spiegelgröße ist abhängig von der Wandhöhe.

**TECHNISCHE DATEN**  
 Der Spiegel ist erhältlich in Schwarz oder Silber. Der Spiegel ist erhältlich in Schwarz oder Silber. Der Spiegel ist erhältlich in Schwarz oder Silber.


**GUBI**

INDHOLD/CONTENTS/INHALT:




1. DK: Monteret af holder.  
 EN: How to mount the bracket.  
 DE: Montage der Halterung.

DK: Trævæg.  
 EN: Wooden wall.  
 DE: Holzwand.




DK: Betonvæg.  
 EN: Concrete wall.  
 DE: Betonwand.



MONTAGEVEJLEDNING/ASSEMBLY INSTRUCTIONS/MONTAGEANLEITUNG

### ADNET CIRCULAIRE

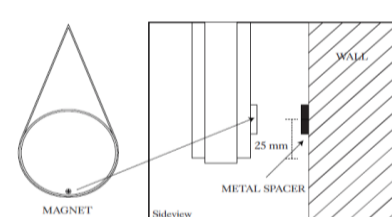

2. DK: Monteret af metal skive til magnet.  
 EN: How to mount the metal spacer for the magnet.  
 DE: Montage der Abtandhalter für den Magnet.

DK: Monter den medfølgende metalskive på væggen 25 mm fra bunden af spejlet. Magneten på bagsiden af spejlet vil dermed sikres, at det altid hænger tæt ind til væggen.

EN: Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.

DE: Montieren Sie die beigelegte Metallscheibe in der Höhe von 2,5 cm vom unteren Rahmen des Spiegels an der Wand. Der Magnet auf der Rückseite des Spiegels wird dadurch gesichert, dass der Spiegel immer an der Wand hängt.

### MINIMUM CEILING HEIGHT

